

Item No.	Cont. Current	Burst Current (10S)	BEC Type	BEC	Input Voltage	Weight	Dimension L*W*H
30006	6A	10A	Linear	5V/1A	2S	5.5g	25*13*7mm
30010	10A	12A	Linear	5V/2A	2-4S	13g	38*24*10mm
30020	20A	25A	Linear	5V/2A	2-4S	24g	50*25*7mm
30030	30A	40A	Linear	5V/2A	2-4S	24g	50*25*7mm
30040	40A	50A	Linear	5V/4A	2-6S	43g	52*25*11mm
30050	50A	60A	Linear	5V/4A	2-6S	43g	52*25*11mm
30060	60A	80A	Linear	5V/6A	2-6S	49g	56*29*11mm
30080	80A	100A	Linear	5V/6A	2-6S	72g	62*35*12mm
300100	100A	120A	Linear	5V/6A	2-6S	73g	62*35*12mm

First time to use your brushless electronic speed controller

Note: In order to make it work properly, when you use the ESC at first time or exchange to use with another transmitter, please reset the throttle curve.

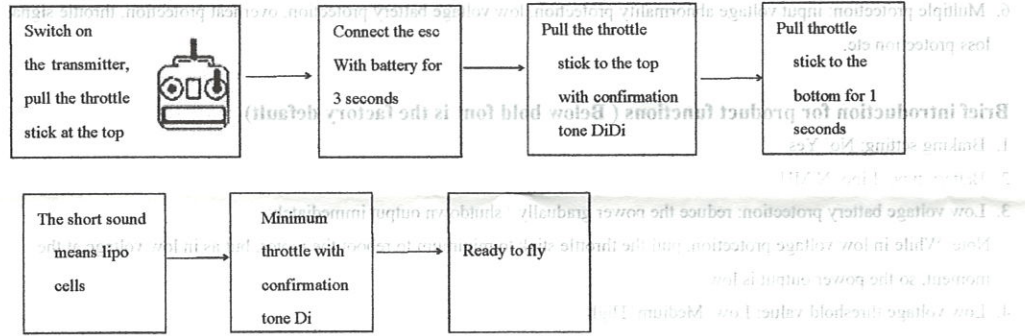


Diagram of Connection

While the battery comes with banana plug, please connect the battery negative pole first instead of positive, connection order should be: 1st step: battery negative → 2nd step: battery positive

